

Back wall for C30-10DR-M Back wall closed

(suitable for 40GP and 40HQ containers)

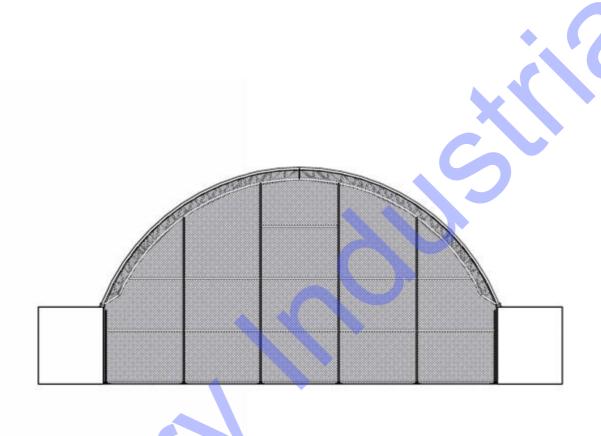


Parts List		
Code	Description	Qty
B1L	Base plate on the left	1
B1R	Base plate on the right	1
B2	Base plate at middle	2
B3L	Left standing legs of the front and back panel	1
B3R	Right standing legs of the front and back panel	1
B4	Lower standing legs of the front and back panel	2
B5L	Upper side standing legs of the back panel at left	1
B5R	Upper side standing legs of the back panel at right	1
В6	Upper horizontal pipe of the back panel	2
В7	Horizontal pipe of the back panel	4
В8	Lower tension tube of the back panel	3
В9	Standing legs clamping piece (40*60square tube)	8
B10	Fixing iron of the legs along the container	2
B11	The back panel	1
B12	25 PPR tube	40
B13	Added standing leg	2
B14	Half arc fired inclined 3 hole iron plate	4
U25	Stake peg	8
U2	Ratchet with band	100
U14	Round plug	6
U12	Square plug	4
S18	Hexagon bolt M10*30	10
S15	Hexagon bolt M10*90	12
S41	Self-tapping screw	128
S30	Flange nut M10	22


A Back wall frame assembly

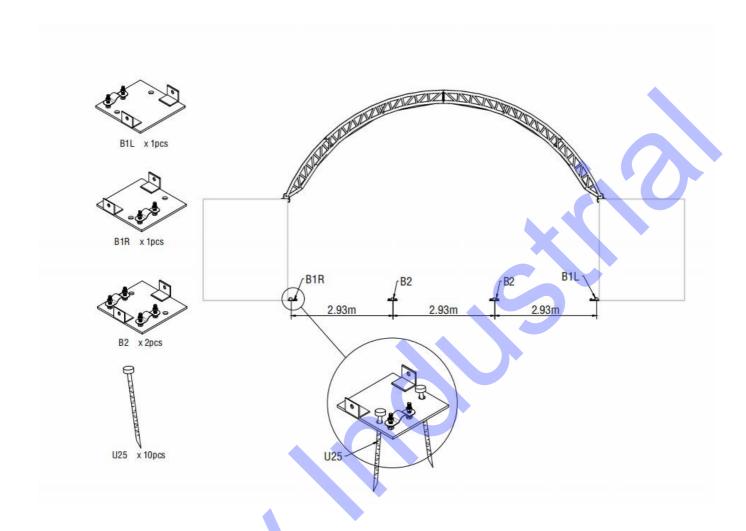


As Above Figures shows, find out all spare parts for the front wall. connect them together by use screw, make sure the spacing. There are stake pegs for base plates.


1. Install on GP container

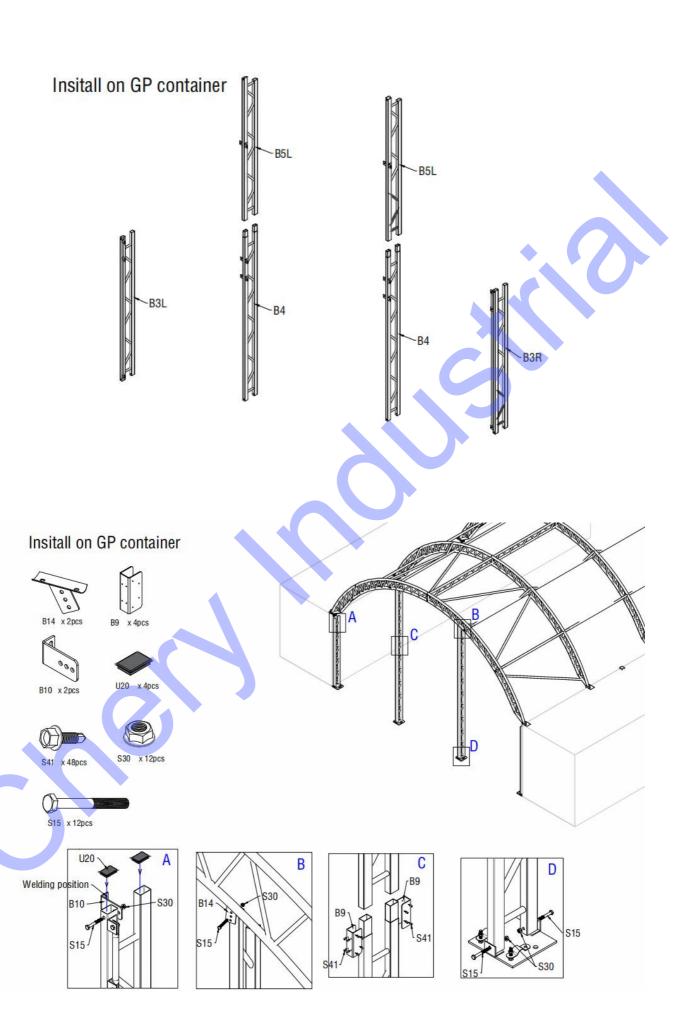

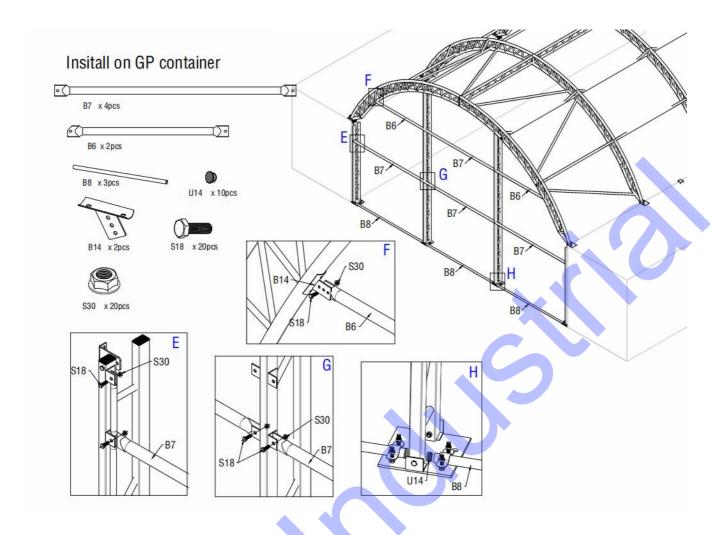



2. Install on HQ container

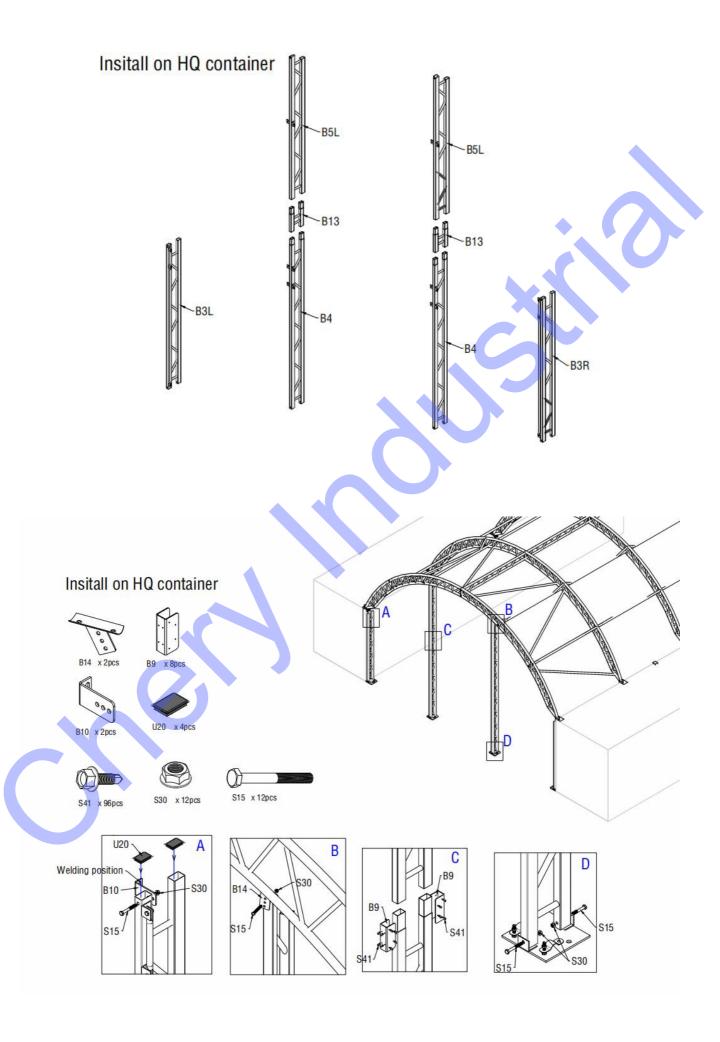

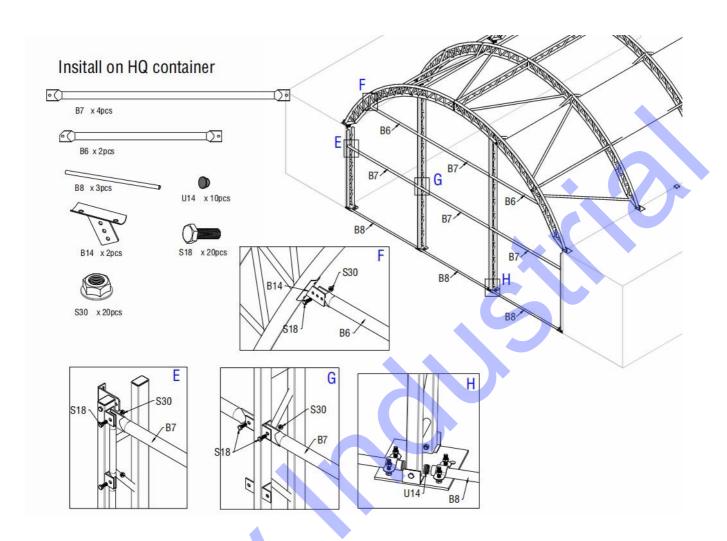

B Back wall cover assembly

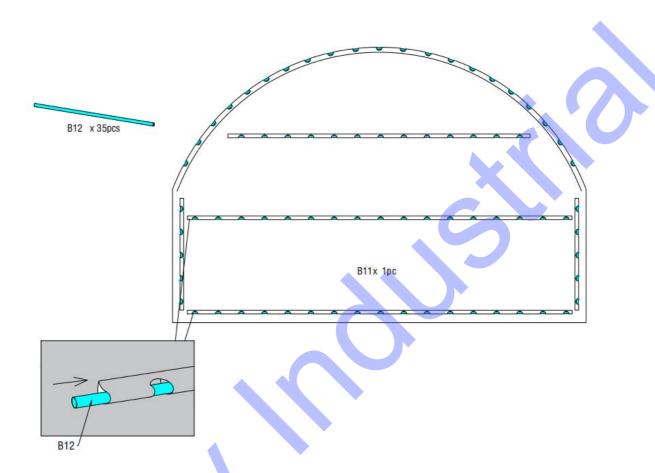

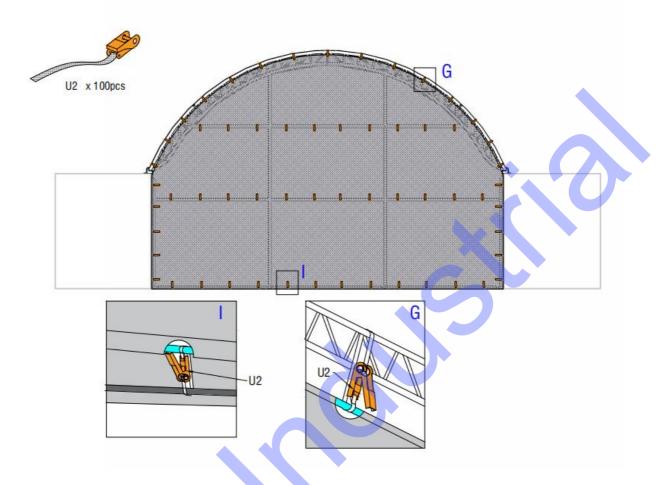

Spread the door cover on the ground, and insert the door dropping tube (No. B12) into the horizontal fabric pouch of the door cover.

Adjust and tighten them once per month after assembly to make sure them works perfect.