


Back wall for C40-15DR-M

Back wall closed


(suitable for 40GP and 40HQ containers)

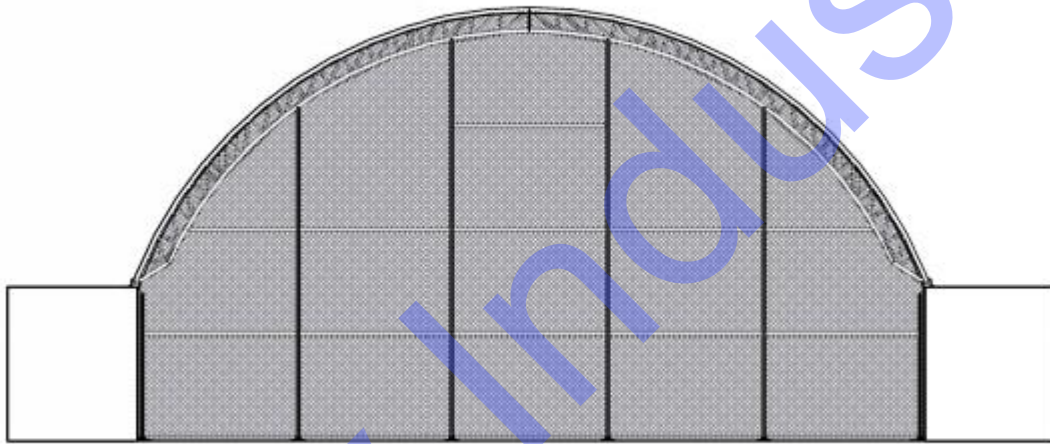

| Parts List | | |
|------------|---|-----|
| Code | Description | Qty |
| B1L | Base plate on the left | 1 |
| B1R | Base plate on the right | 1 |
| B2 | Base plate at middle | 3 |
| B3L | Left standing legs of the front and back panel | 1 |
| B3R | Right standing legs of the front and back panel | 1 |
| B4 | Lower standing legs of the front and back panel | 3 |
| B5 | Middle standing legs at middle of the back panel | 3 |
| B6 | Upper standing legs in the middle of the back panel at left | 1 |
| B7L | Upper side standing legs of the back panel at left | 1 |
| B7R | Upper side standing legs of the back panel at right | 1 |
| B8 | Horizontal pipe of the back panel at the shoulder | 2 |
| B9 | Horizontal pipe of the back panel | 6 |
| B10 | Lower tension tube of the back panel | 3 |
| B11 | Fixing iron of the legs along the container | 2 |
| B12 | Standing legs clamping piece (40*60square tube) | 18 |
| B13 | Half arc fired straight 3 hole iron plate | 1 |
| B14 | Half arc fired inclined 3 hole iron plate | 4 |
| B15 | The back panel | 1 |
| B16 | Added standing leg | 3 |
| B17 | 25 PPR tube | 29 |
| U26 | Stake peg | 10 |
| S3 | expansion screw | 10 |

| | | |
|-----|---------------------|-----|
| U2 | Ratchet with band | 145 |
| U15 | Round plug | 10 |
| U12 | Square plug | 4 |
| S18 | Hexagon bolt M10*30 | 16 |
| S15 | Hexagon bolt M10*90 | 20 |
| S41 | Self-tapping screw | 260 |
| S30 | Flange nut M10 | 36 |

 
A Back wall frame assembly



B1L x 1pcs



 
B1R x 1pcs



B2 x 3pcs




U26 x 10pcs

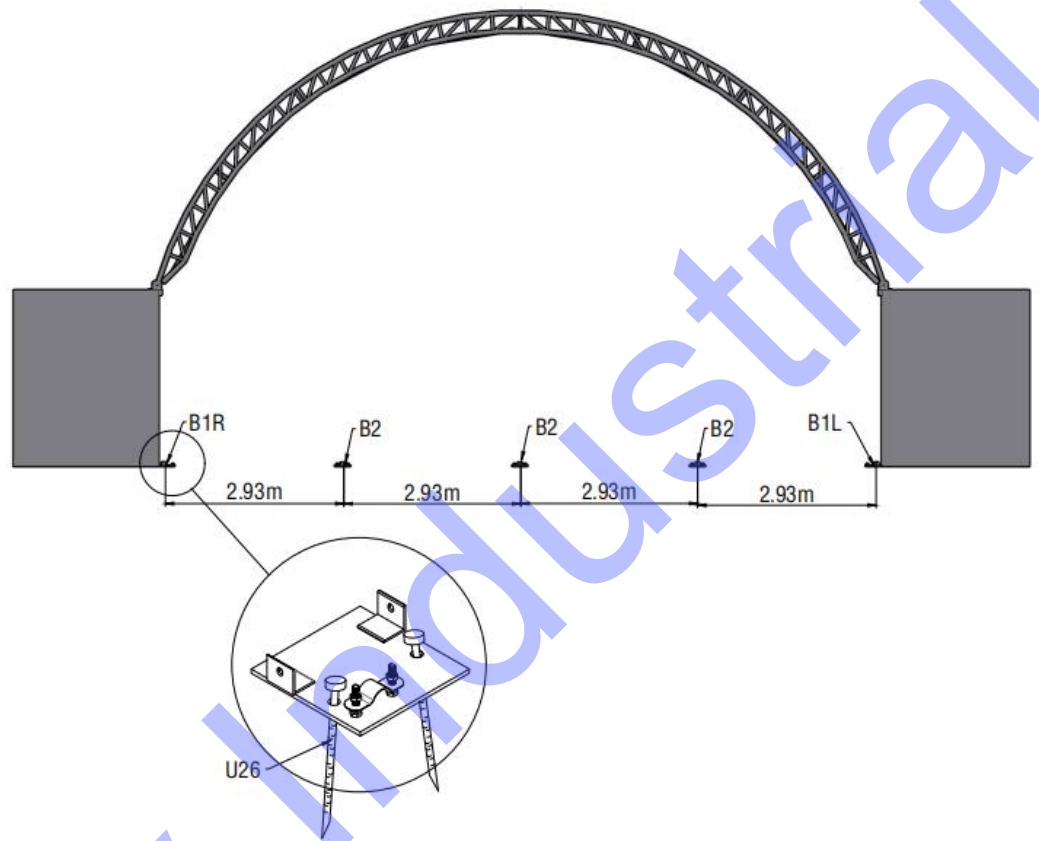


As Above Figures shows, find out all spare parts for the front wall. connect them together by use screw, make sure the spacing. There are stake pegs for base plates.

1. Install on GP container


Install on GP container

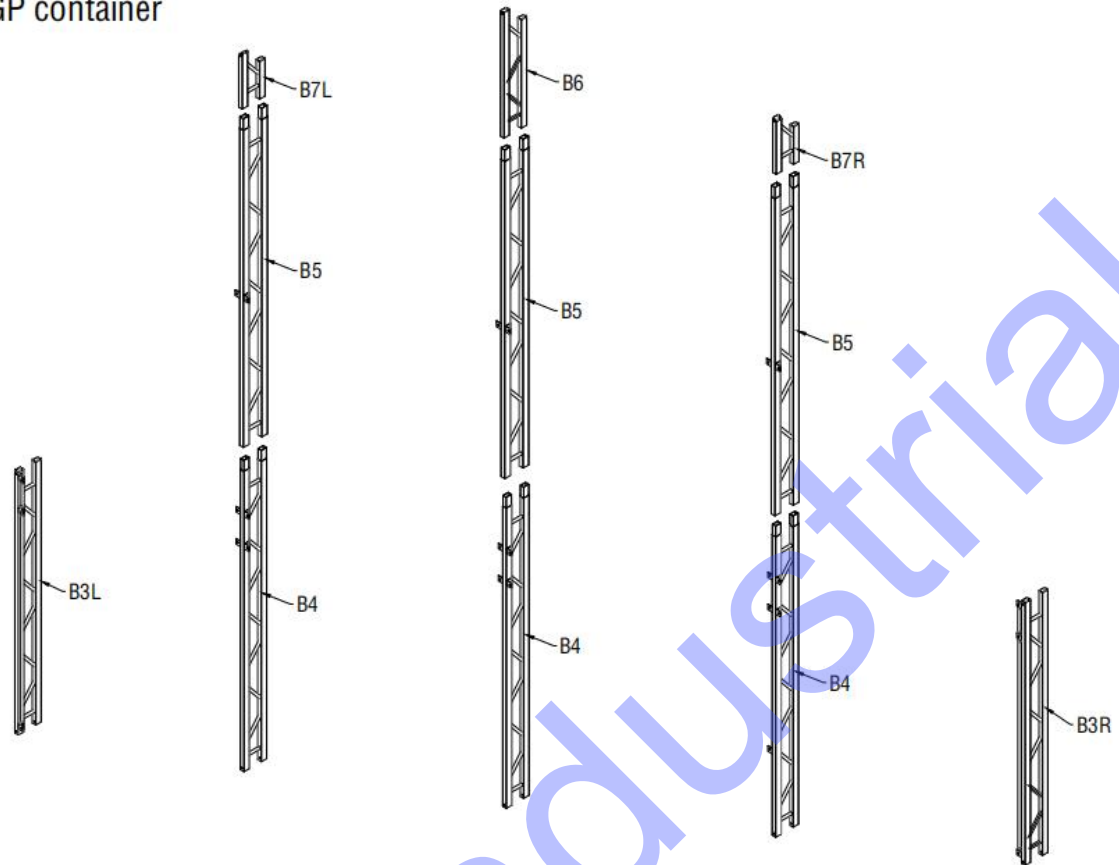

Install on GP container

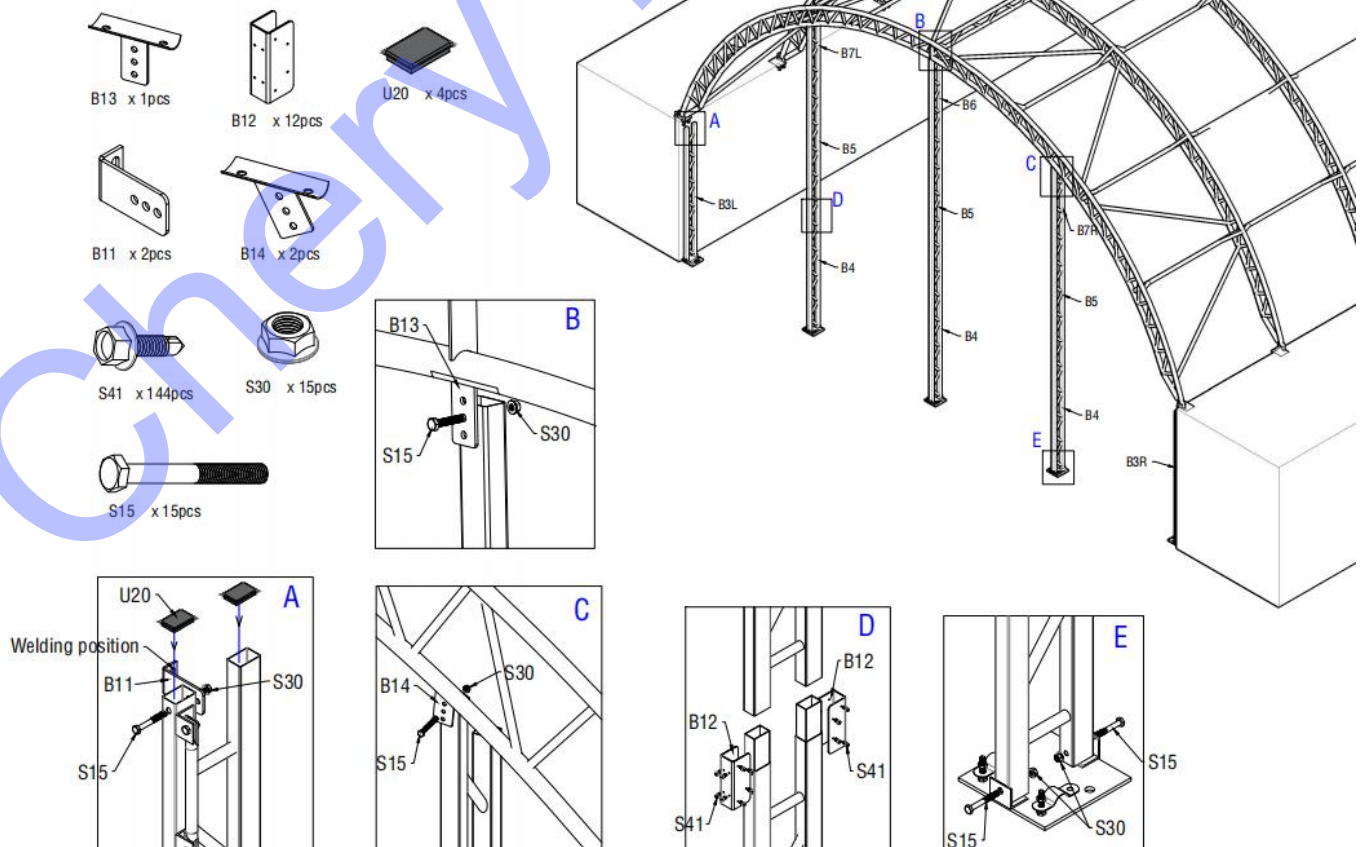


Install on GP container

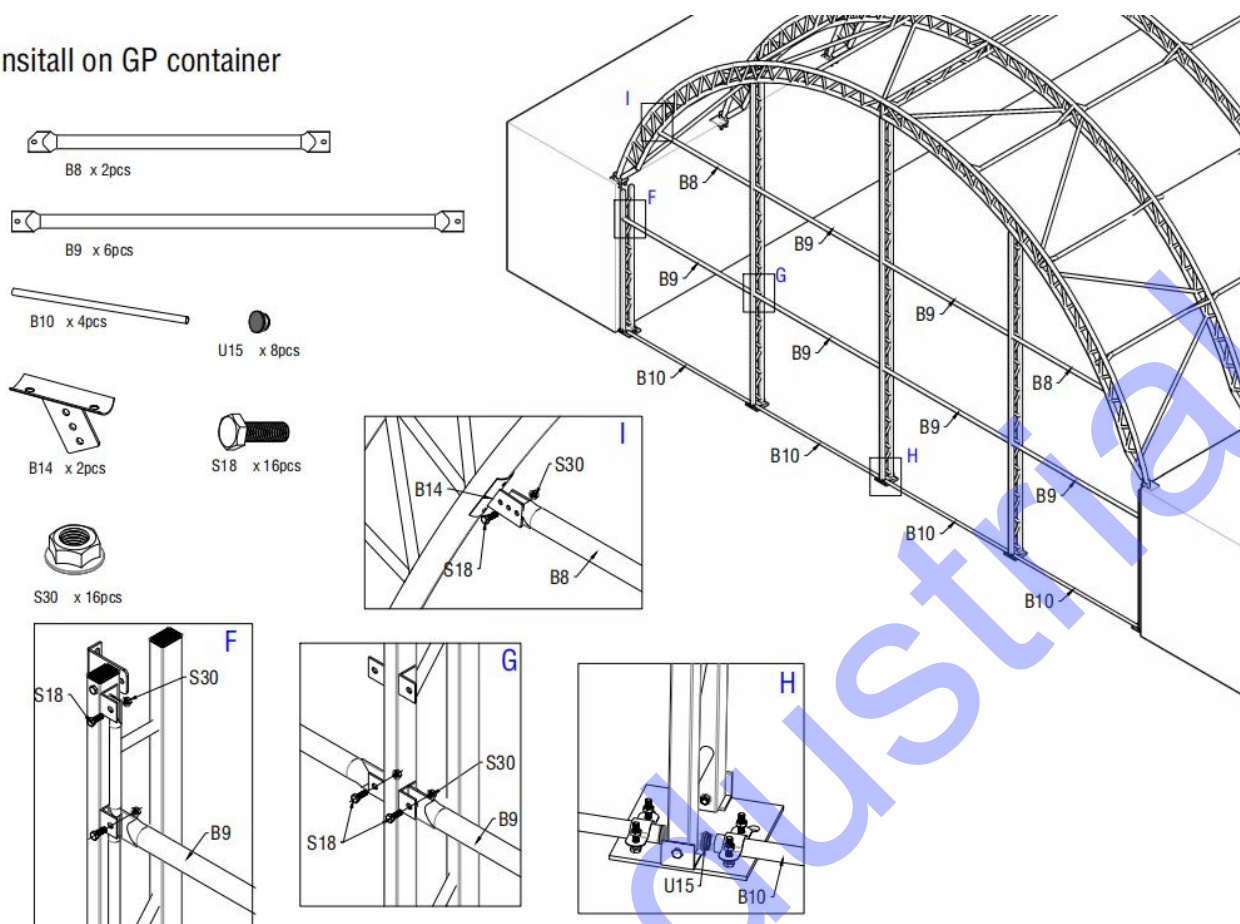


2. Install on HQ container







Insitall on HQ container

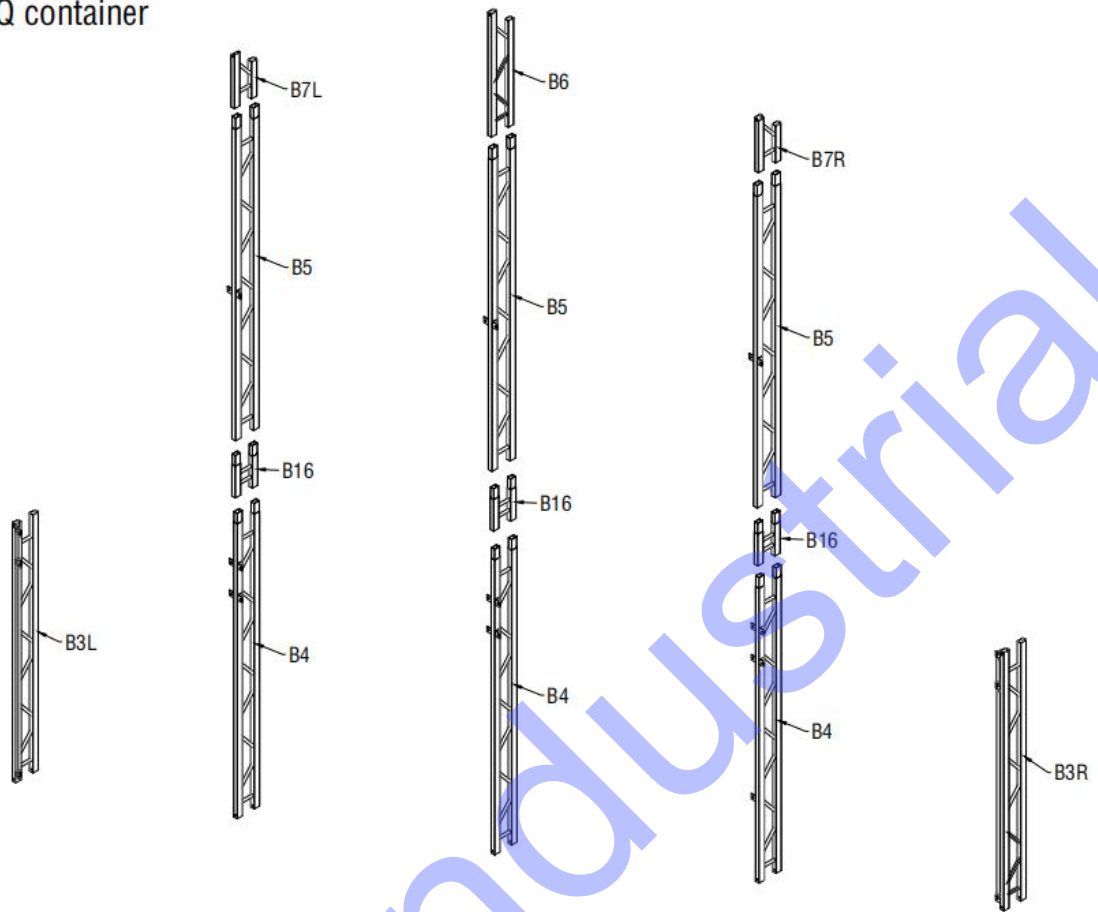


Insitall on HQ container

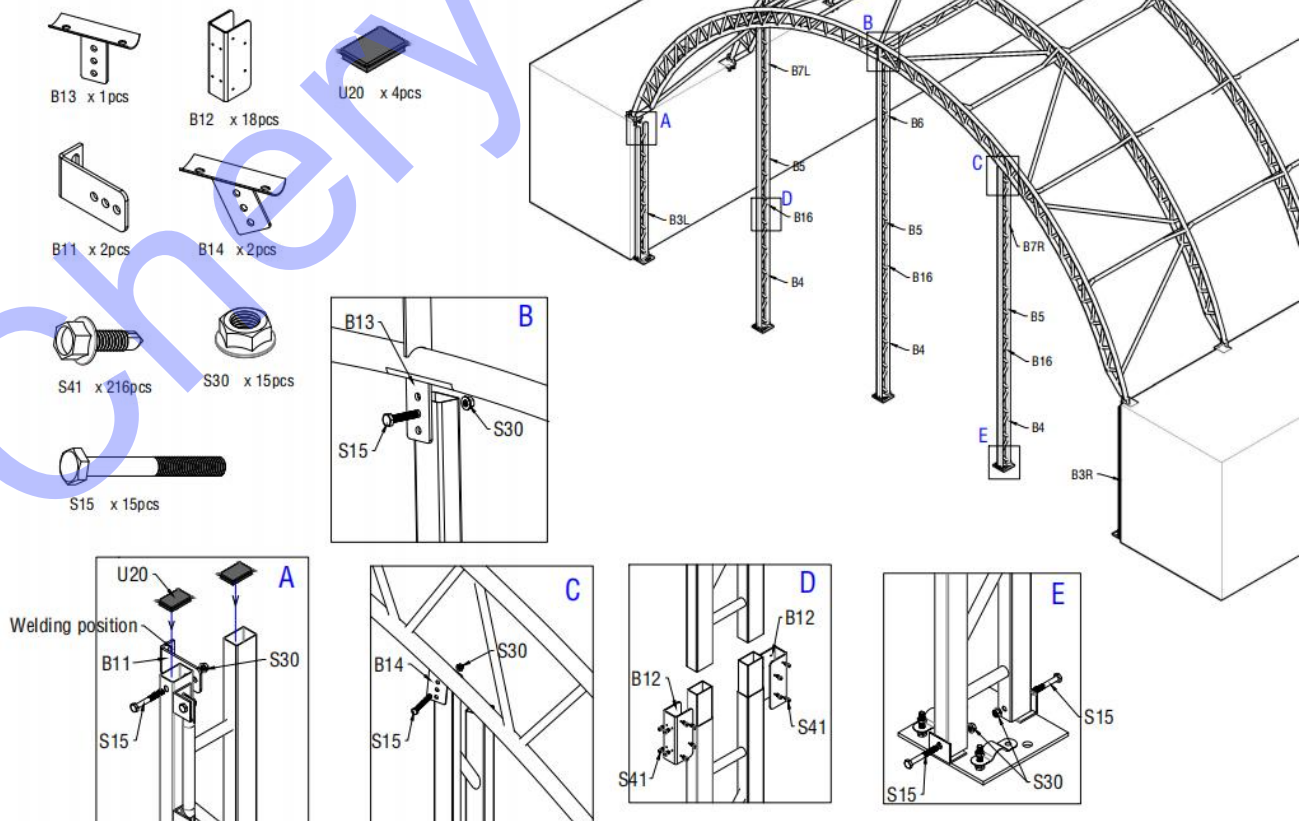


Insitall on HQ container

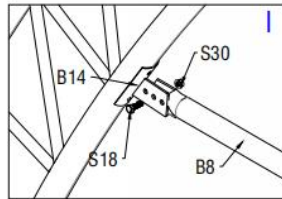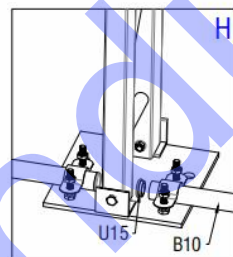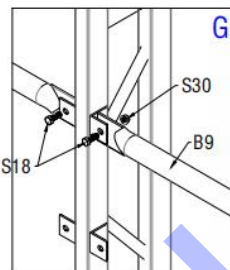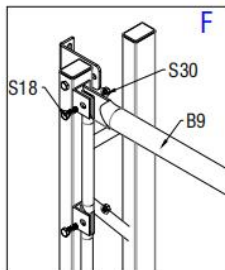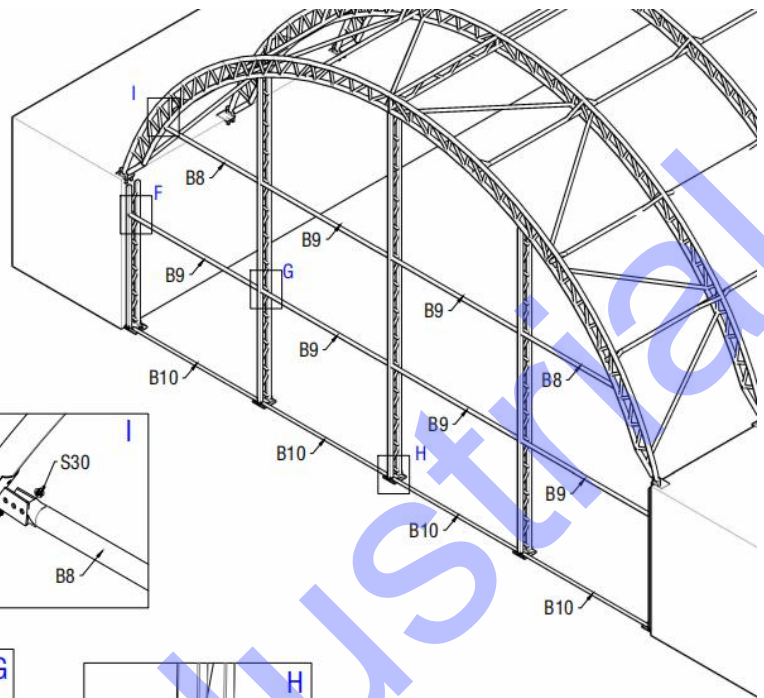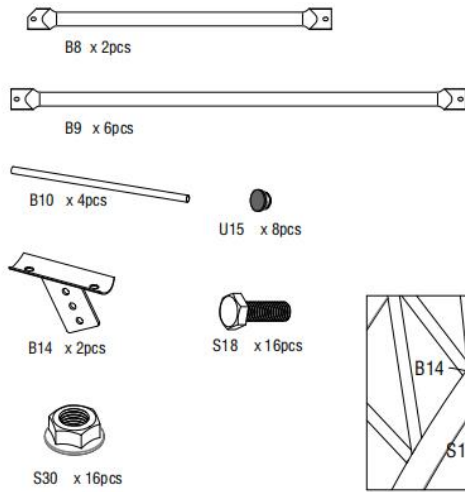

B Back wall cover assembly

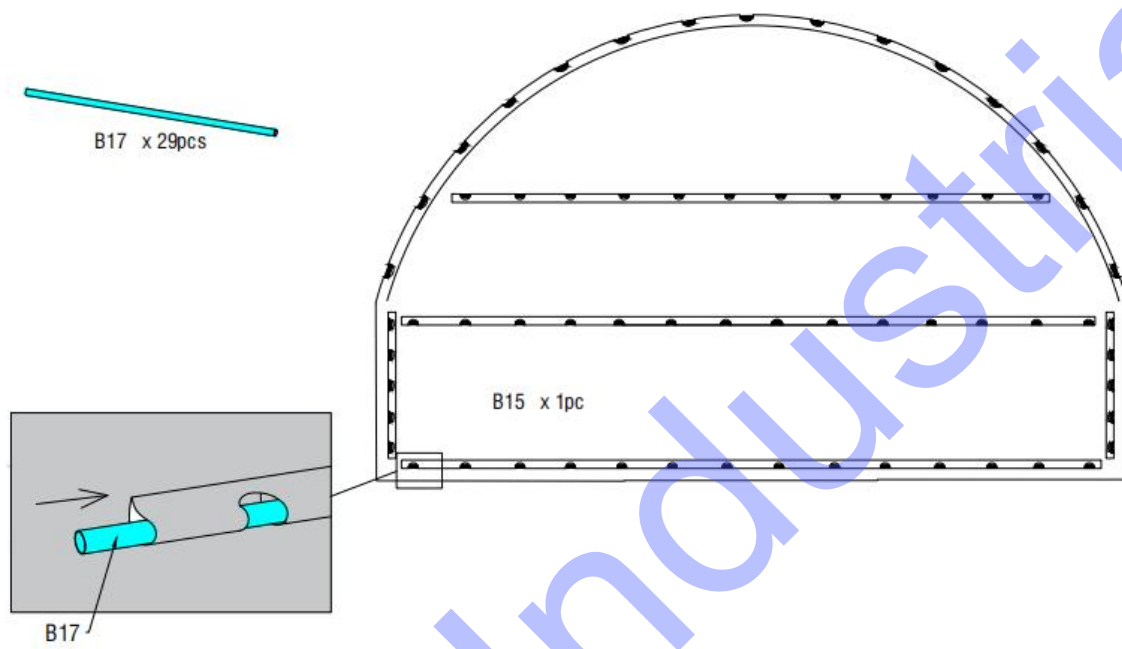

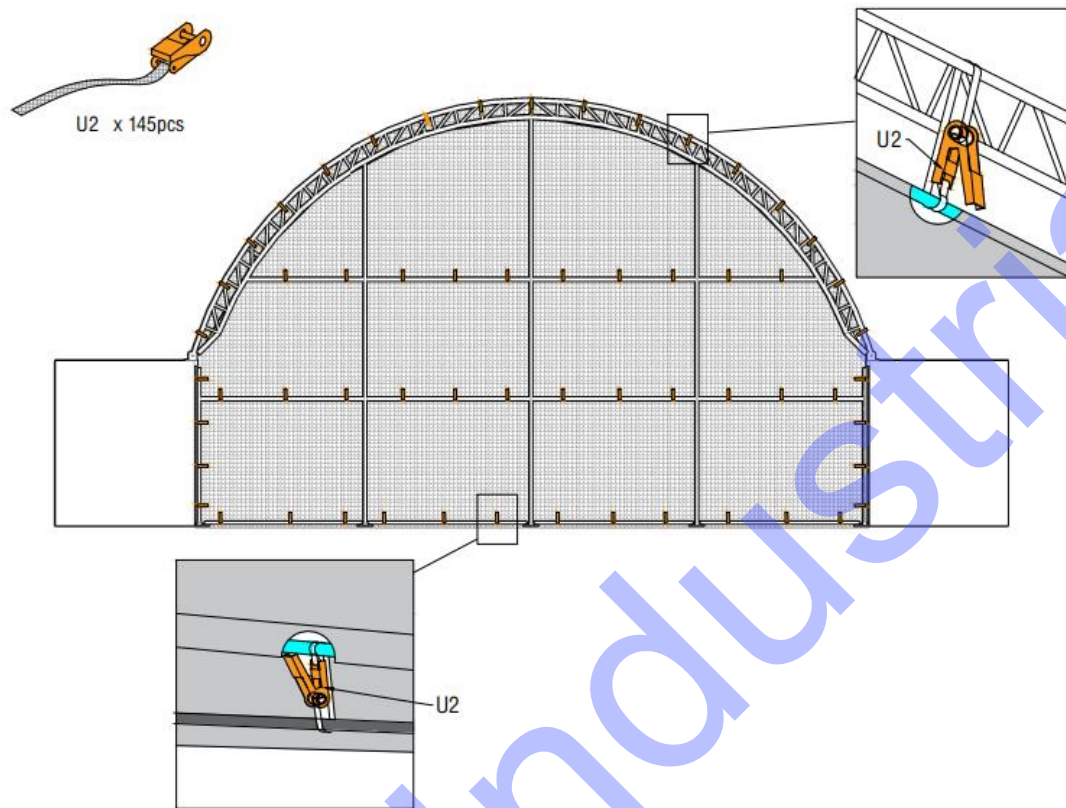

Spread the door cover on the ground, and insert the door dropping tube (No. B17) into the horizontal fabric pouch of the door cover.

Adjust and tighten them once per month after assembly to make sure them works perfect.