


Back wall for C50-17DR-M


Back wall closed

(suitable for 40GP and 40HQ containers)

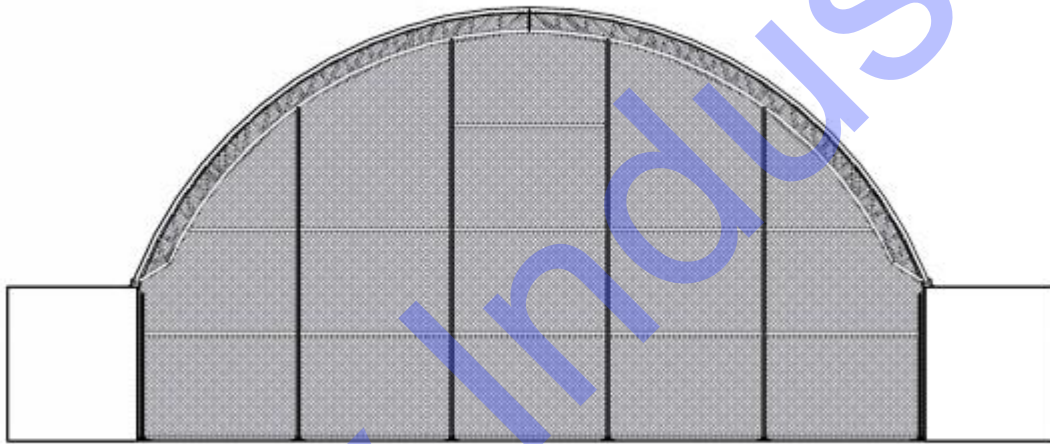

Parts List		
Code	Description	Qty
B1L	Base plate on the left	1
B1R	Base plate on the right	1
B2	Base plate at middle	4
B3L	The standing legs of the front and back panel along the container left	1
B3R	The standing legs of the front and back panel along the container right	1
B4	Lower standing legs of the front and back panel	4
B5	Middle standing legs at middle of the back panel	4
B6L	Upper standing legs in the middle of the back panel at left	1
B6R	Upper standing legs in the middle of the back panel at right	1
B7L	Upper side standing legs of the back panel at left	1
B7R	Upper side standing legs of the back panel at right	1
B8	Horizontal pipe of the back panel at the shoulder	2
B9	Horizontal pipe of the back panel	9
B10	Lower tension tube of the back panel	5
B11	Fixing iron of the legs along the container	2
B12	Standing legs clamping piece (40*60square tube)	24
B13	Half arc fired inclined 3 hole iron plate	6
B14	The back panel	1
B15	Added standing leg	4
B16	25 PPR tube	35
U26	Stake peg	12
U2	Ratchet with band	172
U20	Square plug	4
U15	Round plug	10
S18	Hexagon bolt M10*30	20
S15	Hexagon bolt M10*90	18
S41	Self-tapping screw	320
S30	Hexagon nut M10	38


A Back wall frame assembly

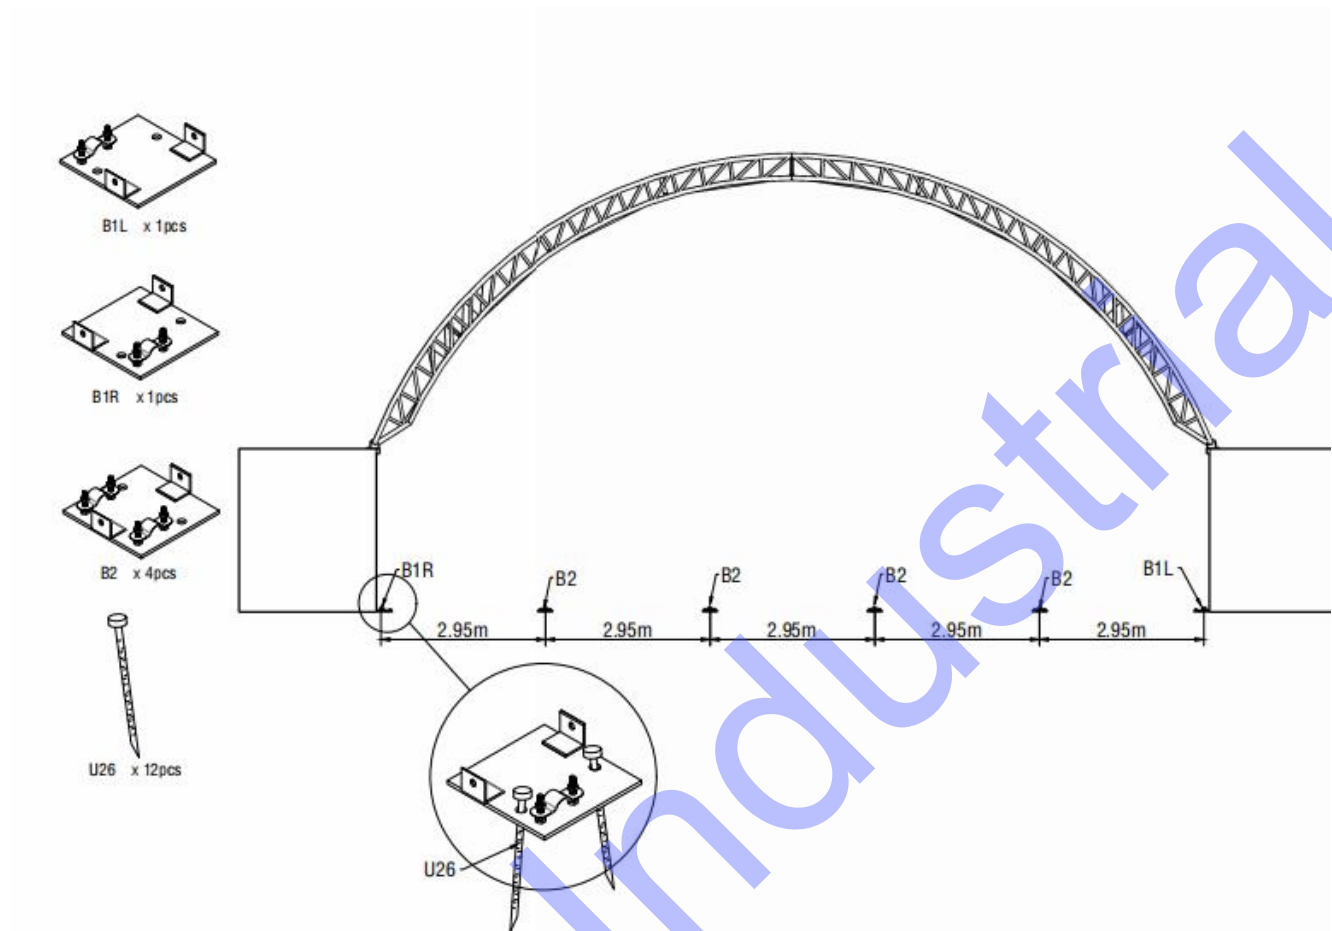


As Above Figures shows, find out all spare parts for the front wall. connect them together by use screw, make sure the spacing. There are stake pegs for base plates.

1. Install on GP container


Insitall on GP container

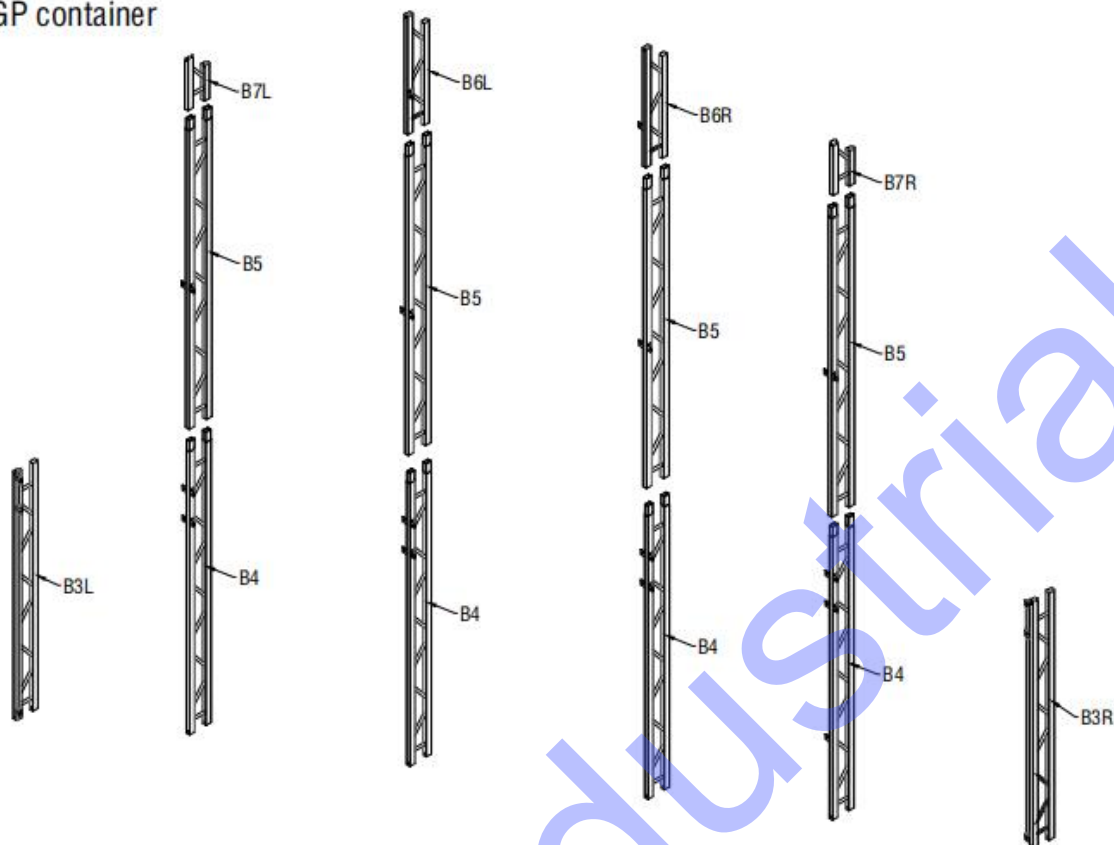

Insitall on GP container

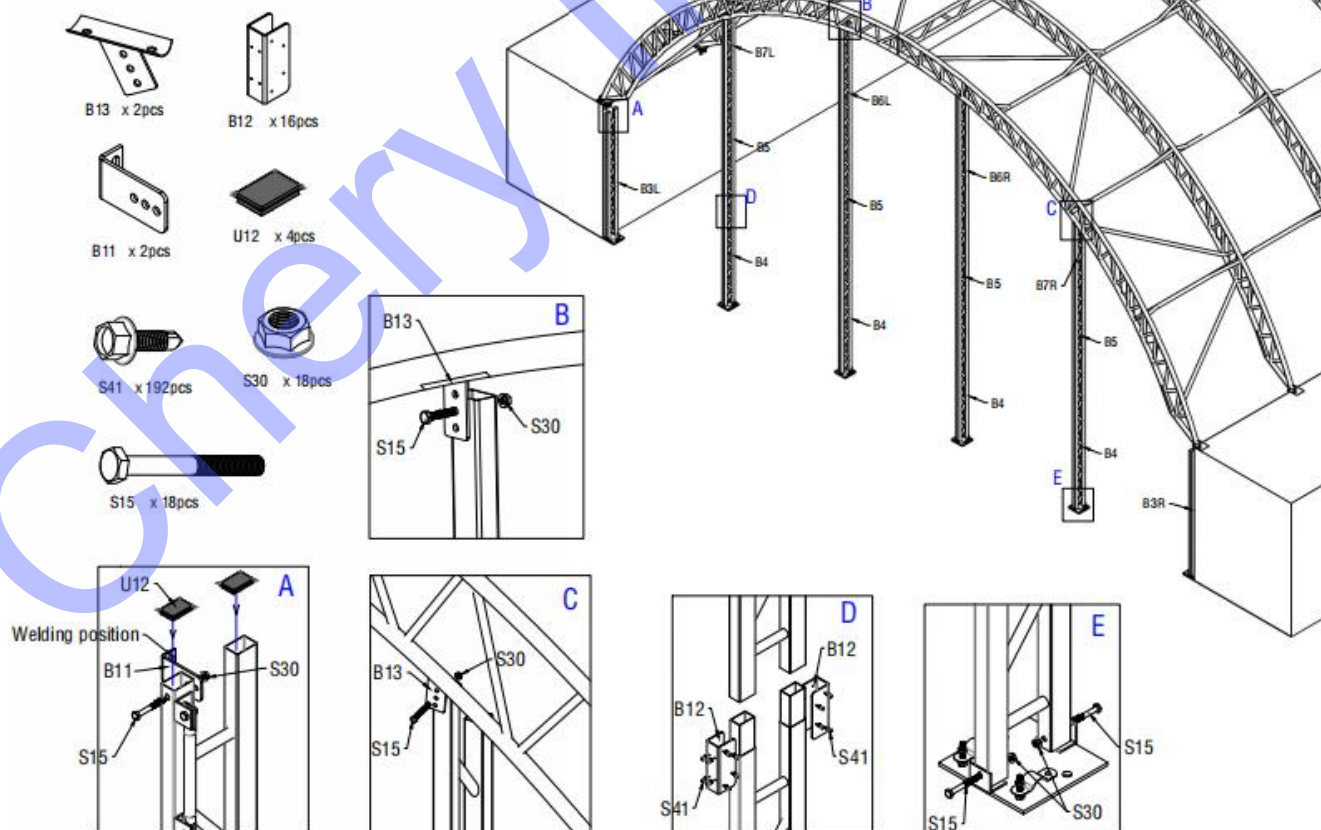















Insitall on GP container

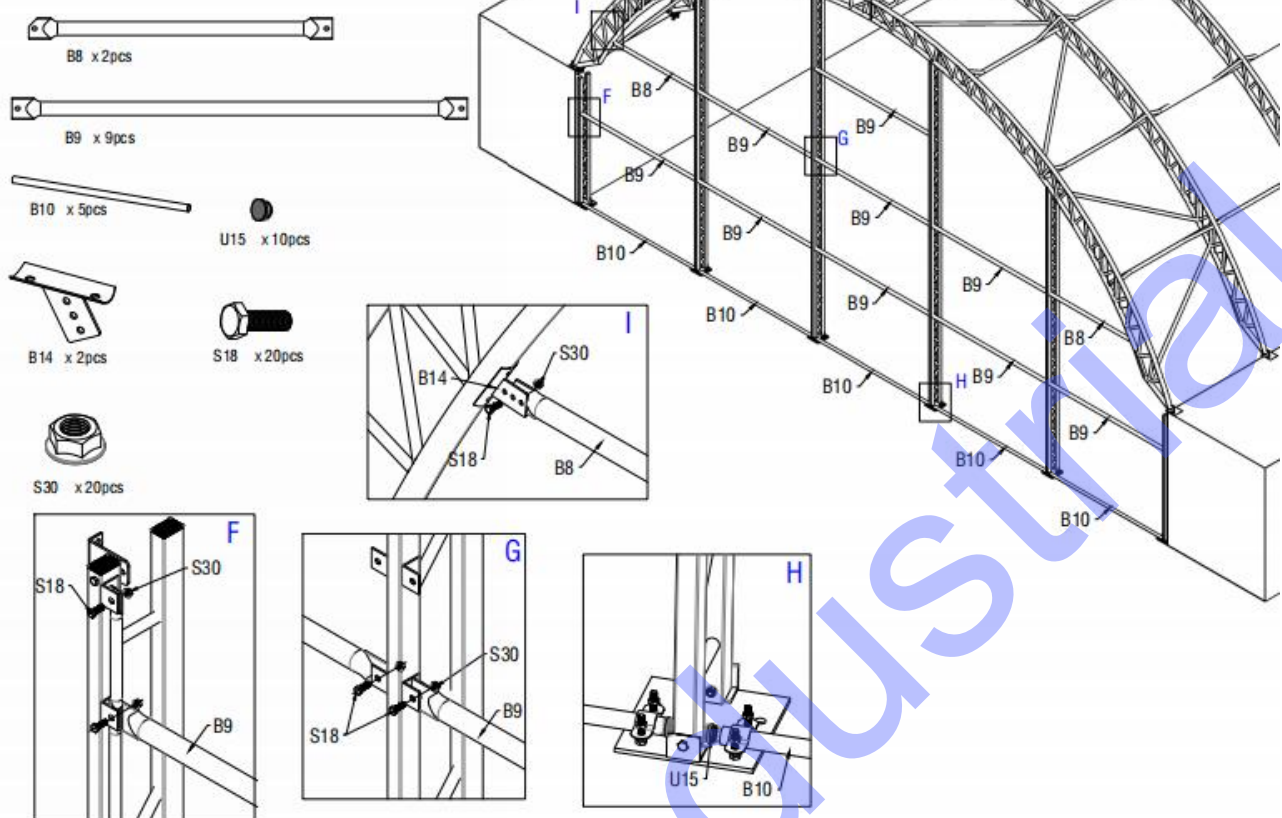


2. Install on HQ container


Insitall on HQ container

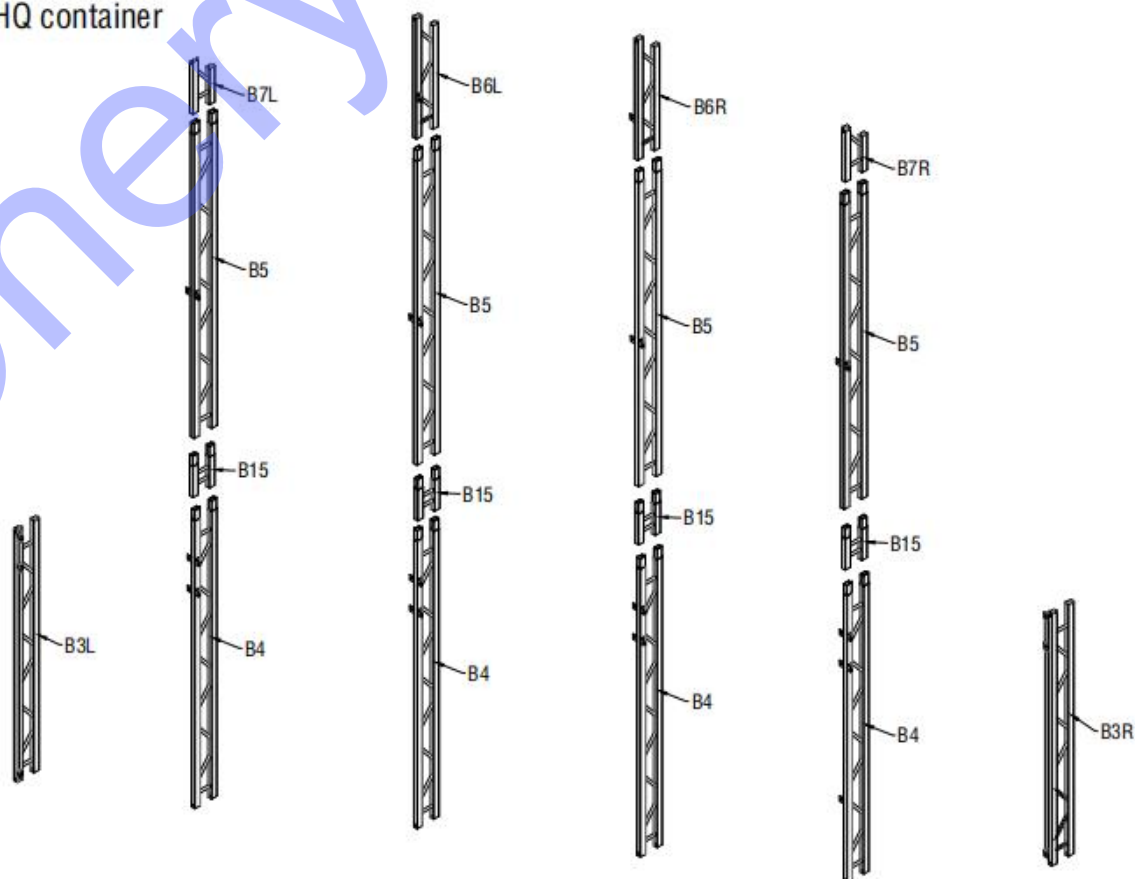

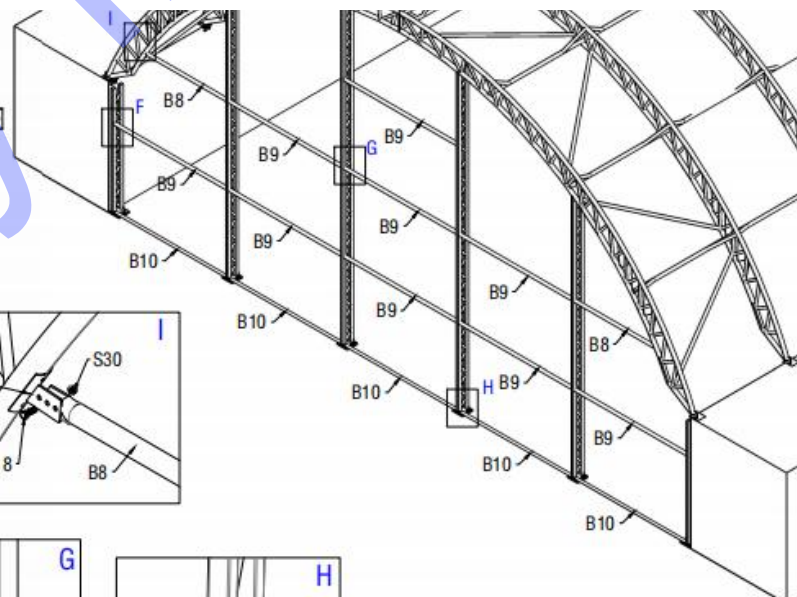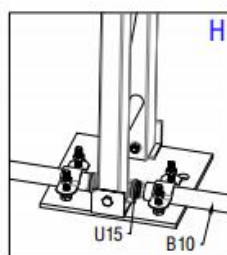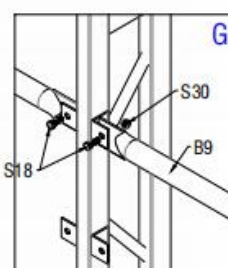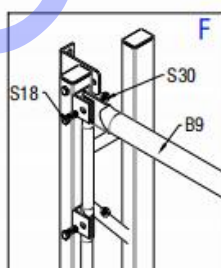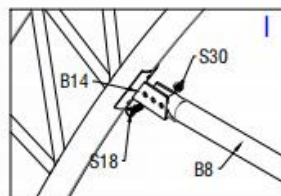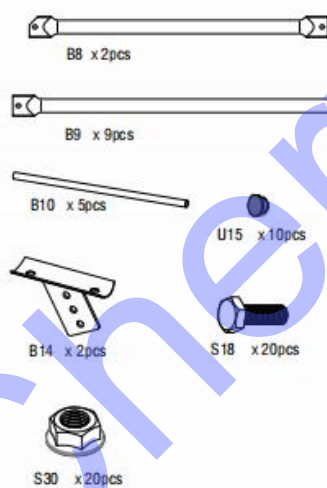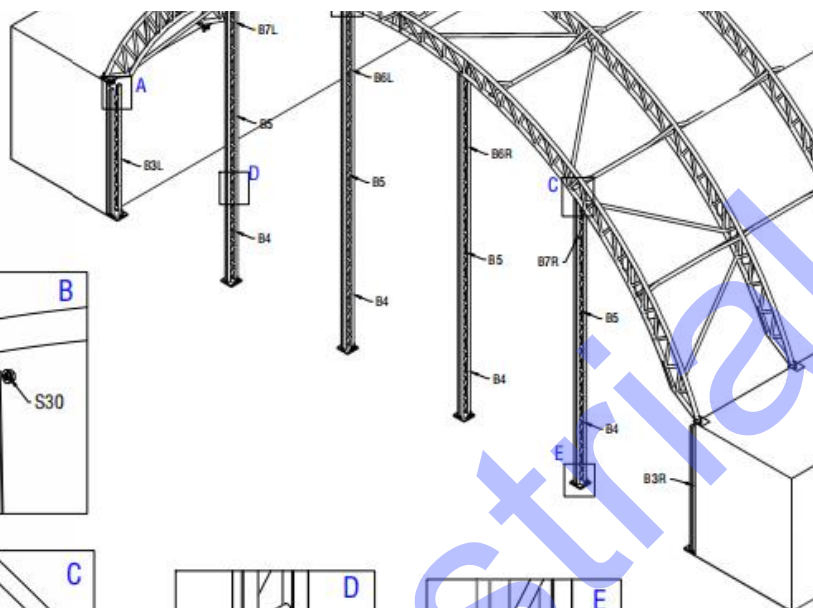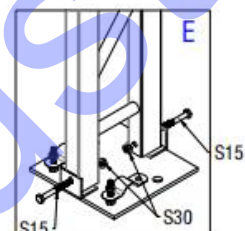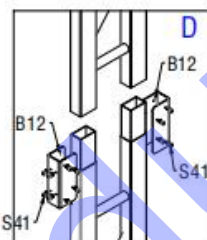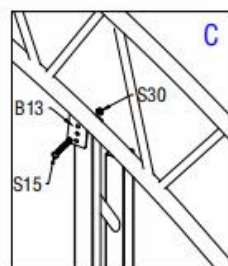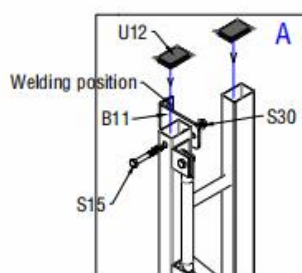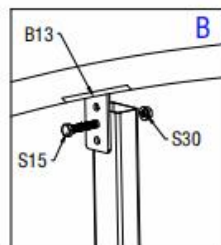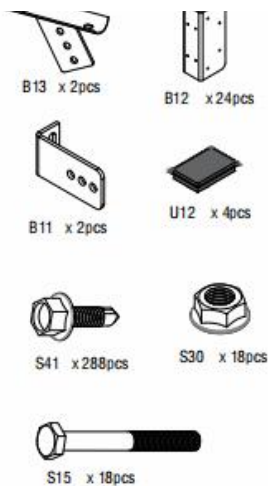

B Back wall cover assembly

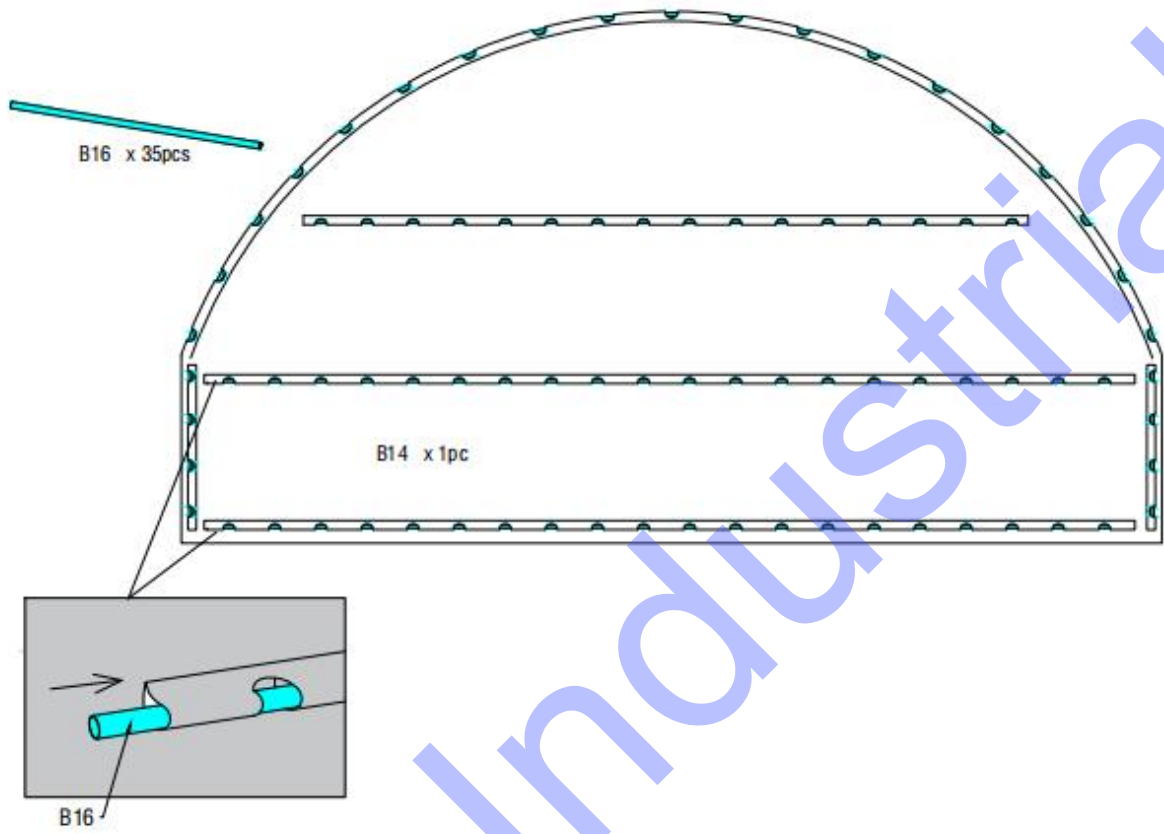

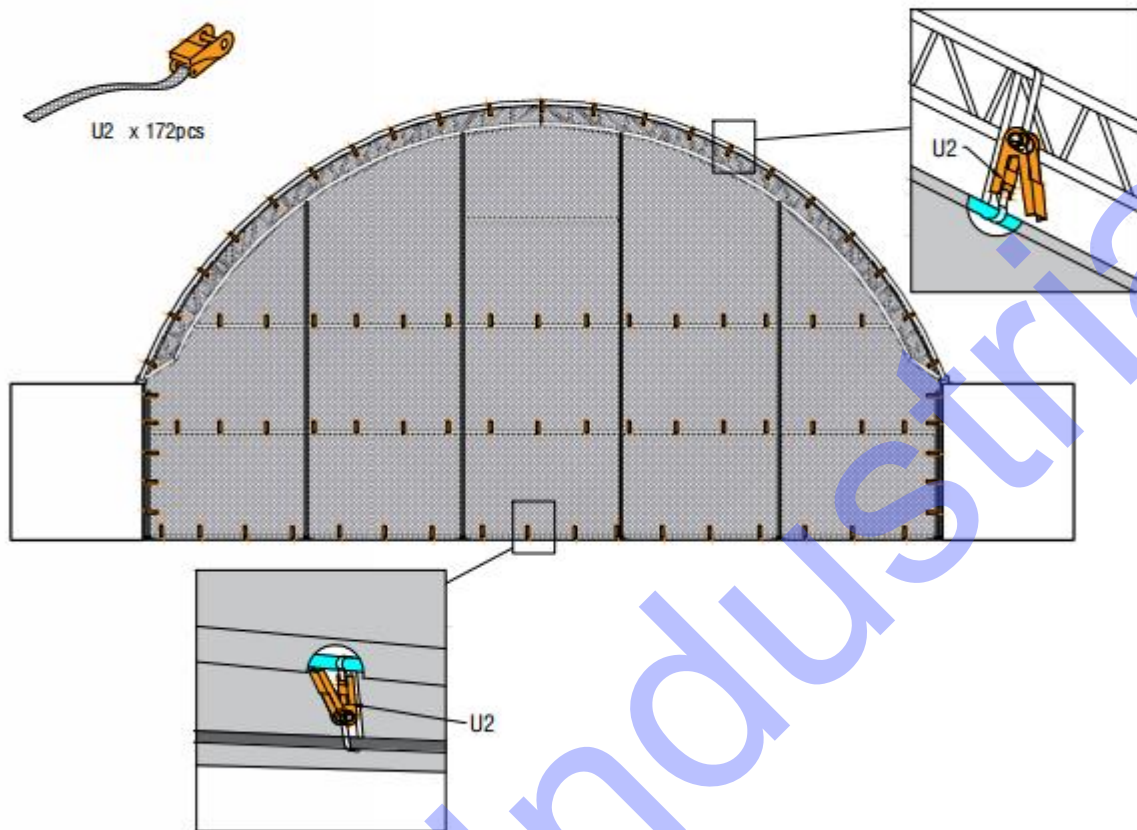

Spread the door cover on the ground, and insert the door dropping tube (No. B16) into the horizontal fabric pouch of the door cover.

Adjust and tighten them once per month after assembly to make sure them works perfect.